



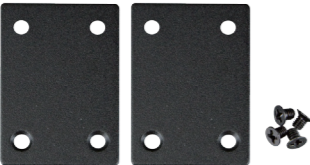
1. Package Contents

Thank you for purchasing PLANET 5-Port Industrial Ethernet Switch with 4-Port PoE, ISW-504PT/ISW-514PTF. The interfaces of these models are shown below:

Model Name	10/100Mbps RJ45 Ports	100FX SFP Slots	PoE Ports
ISW-504PT	5	-	4
ISW-514PTF	4	1	4

In the following section, the term **"Industrial PoE+ Switch"** means the ISW-504PT/ISW-514PTF.

Open the box of the Industrial PoE+ Switch and carefully unpack it. The box should contain the following items:

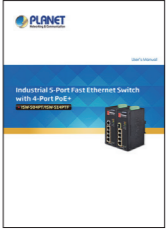Industrial PoE+ Switch x 1 	User's Manual x 1 
Dust Cap x 4 	Wall-mount Kit x 1 

If any of these are missing or damaged, please contact your dealer immediately.

2. Hardware Introduction

2.1 Switch Front Panel

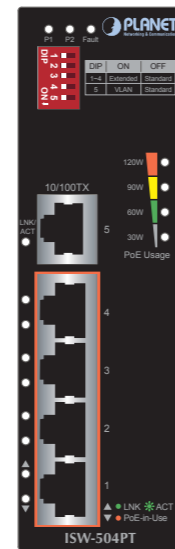


Figure 2-1:
ISW-504PT front panel

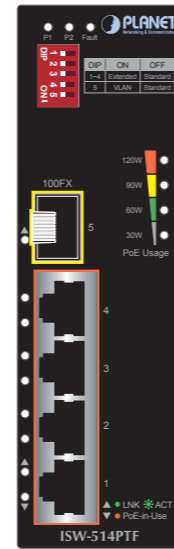


Figure 2-2:
ISW-514PTF front panel

■ Fast Ethernet TP Interfaces




10/100BASE-TX copper, RJ45 twisted-pair: Up to 100 meters.

■ 100BASE-FX SFP Slot (ISW-514PTF)

100BASE-FX mini-GBIC slot, SFP (Small Factor Pluggable) transceiver module: From 2 kilometers (multi-mode fiber) to 20/40/60 kilometers (single-mode fiber).

■ DIP Switch

The Industrial PoE+ Switch provides one DIP switch for **Standard**, **VLAN** and **Extended** mode selections. The detailed descriptions are shown in the following table.

DIP Switch Mode	Function
Standard 	This mode makes the Industrial PoE+ Switch operate as a general switch and all PoE ports operate at 10/100Mbps auto-negotiation.
VLAN 	This mode makes the Industrial PoE+ Switch operate as a VLAN isolation switch and 1. Port 1 to port 4 will isolate respectively. 2. Port 1 to port 4 can only communicate with port 5. Note After adjusting VLAN DIP switch, reboot the Industrial PoE+ Switch to make the change take effect.
Extended 	This mode makes the Industrial PoE+ Switch operate on a per-port basis at 10Mbps full duplex operation but can support IEEE 802.3af PoE power output over a distance of up to 250 meters overcoming the 100m limit on Ethernet UTP cable.

2.2 LED Indicators

➤ System

LED	Color	Function
P1	Green	Lights: indicates power 1 has power.
P2	Green	Lights: indicates power 2 has power.
FAULT	Red	Lights: indicates either power 1 or power 2 has no power.
30W	Orange	Off: indicates the PoE usage is less than 14W. Blinks: indicates that the PoE usage is around 15W to 29W. Lights: indicates the PoE usage is around/over 30W.
60W	Orange	Blinks: indicates that the PoE usage is around 45W to 59W. Lights: indicates the PoE usage is around/over 60W.
90W	Orange	Blinks: indicates that the PoE usage is around 75W to 89W. Lights: indicate the PoE usage is around/over 90W.
120W	Orange	Blinks: indicates that the PoE usage is around 100W to 119W. Lights: indicates the PoE usage is at the maximum.

➤ Per 100FX SFP Slot (Port 5 of ISW-514PTF)

LED	Color	Function
LNK/ACT	Green	Lights: indicates the link through that port is successfully established at 100Mbps. Blinks: indicates that the switch is actively sending or receiving data over that port.

2.3 Switch Upper Panel

The upper panel of the Industrial PoE+ Switch consists of one terminal block connector within two DC power inputs.

Figure 2-3 shows the upper panel of the Industrial PoE+ Switch.

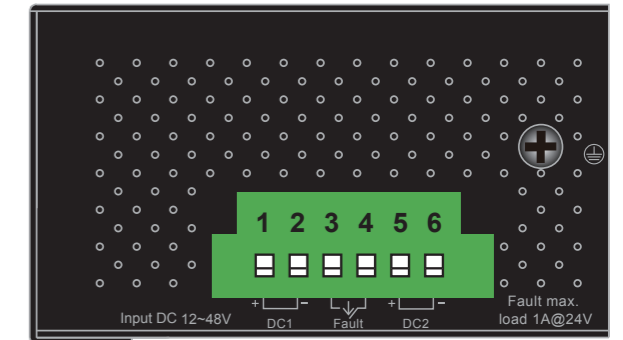


Figure 2-3: Industrial PoE+ Switch Upper Panel

➤ Per 802.3af PoE+ 10/100BASE-TX Interface (Port 1 to Port 4)


LED	Color	Function
LNK/ACT	Green	Lights: indicates the link through that port is successfully established at 10Mbps or 100Mbps. Blinking: indicates that the switch is actively sending or receiving data over that port.
PoE in-Use	Orange	Lights: indicates the port is providing DC in-line power. Off: indicates the connected device is not a PoE powered device (PD).

➤ Per 10/100BASE-TX Interface (Port 5 of ISW-504PT)


LED	Color	Function
LNK/ACT	Green	Lights: indicates the link through that port is successfully established at 10/100Mbps. Blinking: indicates that the switch is actively sending or receiving data over that port.

2.4 Wiring the Power Inputs


The 6-contact terminal block connector on the top panel of Industrial PoE+ Switch is used for two DC redundant power inputs. Please follow the steps below to insert the power wire.

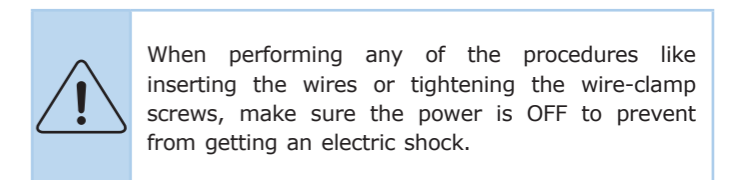

1. Insert positive and negative DC power wires into contacts 1 and 2 for POWER 1, or 5 and 6 for POWER 2.

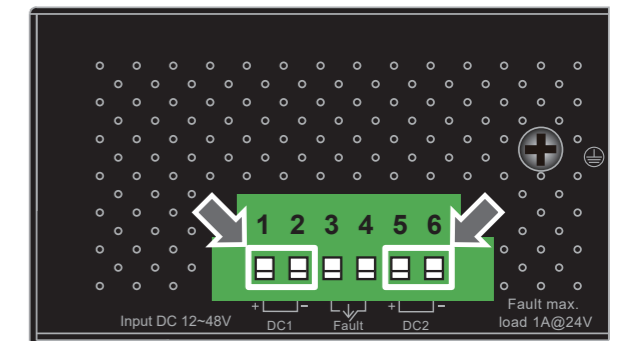

- Tighten the wire-clamp screws for preventing the wires from loosening.

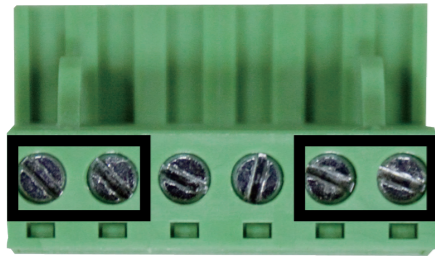

1 2 3 4 5 6
 Power 1 Fault Power 2
 + - + -




The wire gauge for the terminal block should be in the range between 12 and 24 AWG.



- The DC power input range is **12V ~ 48V DC**.
- When the DC power input range is **12V**, the PoE budget is **60W**; When the DC power input range is **24V**, the PoE budget is **90W**; When the DC power input range is **48V**, the PoE budget is **120W**.
 To avoid damage, please use the Industrial PoE+ Switch under its specification.

2.5 Wiring the Fault Alarm Contact

The fault alarm contacts are in the middle of the terminal block connector as the picture shows below. Inserting the wires, the Industrial PoE+ Switch will detect the fault status of the power failure and then forms an open circuit. The following illustration shows an application example for wiring the fault alarm contacts.

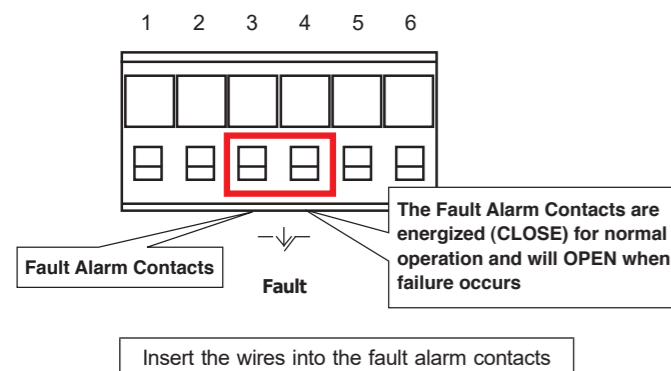

- The wire gauge for the terminal block should be in the range between 12 and 24 AWG.
- Alarm relay circuit accepts up to 24V, max. 1A currents.

3. Installation

This section describes the functionalities of the Industrial PoE+ Switch's components and guides how to install it on the DIN-rail and wall. Basic knowledge of networking is assumed. Please read this chapter completely before continuing.




The installation procedures of the ISW-504PT and ISW-514PTF are the same as they are shown below.


3.1 DIN-rail Mounting Installation



3.2 Wall-mount Plate Mounting

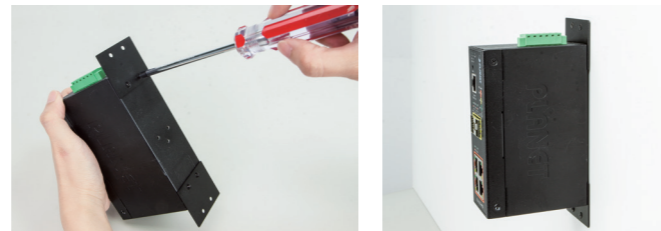

3.3 Side Wall-mount Plate Mounting

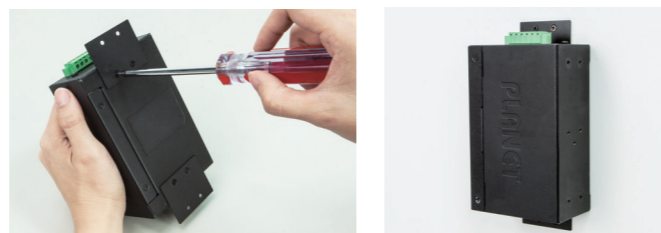

www.PLANET.com.tw

Industrial 5-Port Fast Ethernet Switch with 4-Port PoE+

ISW-504PT/ISW-514PTF



PLANET Technology Corp.

10F., No. 96, Minquan Rd., Xindian Dist., New Taipei City 231, Taiwan

Warning:
 This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.
 2350-AH0230-002



4. Troubleshooting

This chapter contains information to help you solve issues. If the Industrial PoE+ Switch is not functioning properly, make sure the Industrial PoE+ Switch was set up according to instructions in this manual.

➤ The per port LED is not lit

Solution:
 Check the cable connection of the Industrial PoE+ Switch.

➤ Per port LED is lit, but the traffic is irregular

Solution:
 Check whether the attached device is not set to dedicated full duplex. Some devices use a physical or software switch to change duplex modes. Auto-negotiation may not recognize this type of full-duplex setting.

➤ Why the Industrial POE+ Switch doesn't connect to the network

Solution:
 Check each port LED on the Industrial PoE+ Switch. Try another port on the Industrial PoE+ Switch. Make sure the cable is installed properly and the right type. Turn off the power. After a while, turn on the power again.

➤ I connected a PoE powered device to the Industrial POE+ Switch, why it could not be powered on

Solution:

- Please check the cable type of the connection from Industrial POE+ Switch (port 1 to port 4) to the other end. The cable should be an 8-wire UTP, Category 5e or above, EIA568 cable within 100 meters. A cable with only 4-wire, short loop or over 100 meters will affect the power supply.
- Please check and assure the PoE powered device is fully complied with IEEE 802.3at standard.

5. Customer Support

Thank you for purchasing PLANET products. You can browse our online FAQ resource at the PLANET Web site first to check if it could solve your issue. If you need more support information, please contact PLANET PoE support team.

FAQ:

<https://www.planet.com.tw/en/support/faq?method=category&c1=3>

support:

support_switch@planet.com.tw